




**REVOLUTION  
HARNESS  
IDENTIFICATION  
LABEL  
INSTRUCTIONS**

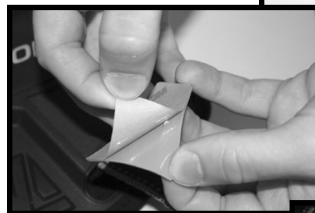

Peel backing off label.


Apply label to backpad. Company identification label is applied to the left location while the worker identification label is applied to the right.



If the label is not pre-printed with identification, use a permanent marker to write identification on the label.

I242 Rev. A.  
MFP9720120

## Snap-On Gen 2 Connector Installation Instructions

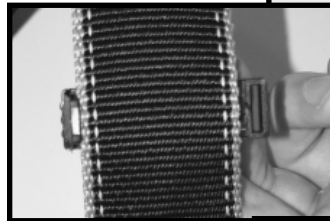

Place back half of  
connector behind  
webbing.

Snap top half with  
green connection but-  
ton on top of the back  
half.



Attach accessory.